

RAZDELILNE LETVE

LETVE ENOSTRANSKE



KODA	VHOD	ŠT VHODOV	IZHOD	ŠT IZHODOV
LR1-2x014-2x018	G1/4	2	G1/8	2
LR1-2x014-3x018	G1/4	2	G1/8	3
LR1-2x014-4x018	G1/4	2	G1/8	4
LR1-2x014-5x018	G1/4	2	G1/8	5
LR1-2x014-6x018	G1/4	2	G1/8	6
LR1-2x038-2x014	G3/8	2	G1/4	2
LR1-2x038-3x014	G3/8	2	G1/4	3
LR1-2x038-4x014	G3/8	2	G1/4	4
LR1-2x038-5x014	G3/8	2	G1/4	5
LR1-2x038-6x014	G3/8	2	G1/4	6
LR1-2x012-2x014	G1/2	2	G1/4	2
LR1-2x012-2x038	G1/2	2	G3/8	2
LR1-2x012-2x012	G1/2	2	G1/2	2
LR1-2x012-3x014	G1/2	2	G1/4	3
LR1-2x012-3x038	G1/2	2	G3/8	3
LR1-2x012-3x012	G1/2	2	G1/2	3
LR1-2x012-4x014	G1/2	2	G1/4	4
LR1-2x012-4x038	G1/2	2	G3/8	4
LR1-2x012-4x012	G1/2	2	G1/2	4
LR1-2x012-5x014	G1/2	2	G1/4	5
LR1-2x012-5x038	G1/2	2	G3/8	5
LR1-2x012-5x012	G1/2	2	G1/2	5
LR1-2x012-6x014	G1/2	2	G1/4	6
LR1-2x012-6x038	G1/2	2	G3/8	6
LR1-2x012-6x012	G1/2	2	G1/2	6

LETVE DVOSTRANSKE



KODA	VHOD	ŠT VHODOV	IZHOD	ŠT IZHODOV
LR2-2x014-4x018	G1/4	2	G1/8	2+2
LR2-2x014-6x018	G1/4	2	G1/8	3+3
LR2-2x014-8x018	G1/4	2	G1/8	4+4
LR2-2x014-10x018	G1/4	2	G1/8	5+5
LR2-2x014-12x018	G1/4	2	G1/8	6+6
LR2-2x038-4x014	G3/8	2	G1/4	2+2
LR2-2x038-6x014	G3/8	2	G1/4	3+3
LR2-2x038-8x014	G3/8	2	G1/4	4+4
LR2-2x038-10x014	G3/8	2	G1/4	5+5
LR2-2x038-12x014	G3/8	2	G1/4	6+6
LR2-2x012-4x014	G1/2	2	G1/4	2+2
LR2-2x012-4x038	G1/2	2	G3/8	2+2
LR2-2x012-4x012	G1/2	2	G1/2	2+2
LR2-2x012-6x014	G1/2	2	G1/4	3+3
LR2-2x012-6x038	G1/2	2	G3/8	3+3
LR2-2x012-6x012	G1/2	2	G1/2	3+3
LR2-2x012-8x014	G1/2	2	G1/4	4+4
LR2-2x012-8x038	G1/2	2	G3/8	4+4
LR2-2x012-8x012	G1/2	2	G1/2	4+4
LR2-2x012-10x014	G1/2	2	G1/4	5+5
LR2-2x012-10x038	G1/2	2	G3/8	5+5
LR2-2x012-10x012	G1/2	2	G1/2	5+5
LR2-2x012-12x014	G1/2	2	G1/4	6+6
LR2-2x012-12x038	G1/2	2	G3/8	6+6
LR2-2x012-12x012	G1/2	2	G1/2	6+6